
D16 AMPLIFIER APPLICATIONS

ADDING A SINGLE IN-CEILING SUBWOOFER (IC-SUB-8)
TO A PAIR OF SPEAKERS

ST BR

1 # 1

Õ

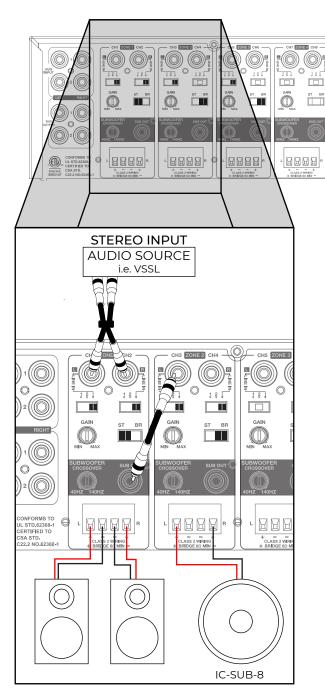

SETUP:

1:1

1. Attach your source to the left and right RCA input and set the switch to "ST" (stereo.)

111

- 8888

ST BR

TRUAUDIO

0

0

FC C E & IN MADE

- 2. Set the left and right channel to "LINE IN" on the speaker zone
- 3. Run a single RCA wire from the speaker zone "SUB OUT" to the subwoofer zone (typically, the adjacent zone) left channel input and set to "LINE IN"
- 4 Set the subwoofer zone to "BR" (bridge). Attach the IC-SUB-8 speaker wires to the subwoofer zone phoenix connector's outermost connectors

ADJUSTING THE SOUND:

- Use the GAIN knob on the speaker zone to adjust the speaker level.
- Use the GAIN knob on the subwoofer zone to adjust the subwoofer level
- Use the source volume control to adjust the overall volume
- Use the subwoofer crossover knob on the speaker zone to adjust the signal coming from the "SUB OUT" RCA to the subwoofer zone.

When using multiple speakers and/or subwoofers, you can send your source into the BUS Inputs.

