



D16 AMPLIFIER APPLICATIONS

RETROFITTING: ADDING A SUBWOOFER TO AN EXISTING PAIR OF SPEAKERS

STANDARD SPEAKER SETUP (ONE PAIR)

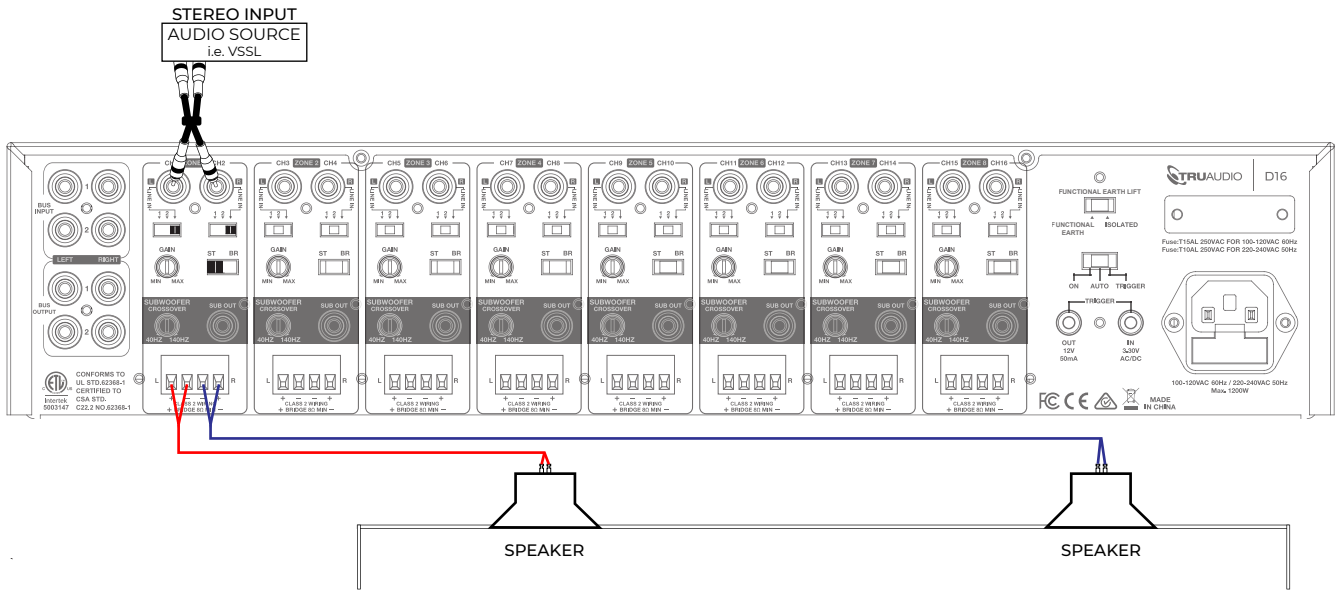

RETROFIT A SUBWOOFER TO STANDARD PAIR OF SPEAKERS SETUP

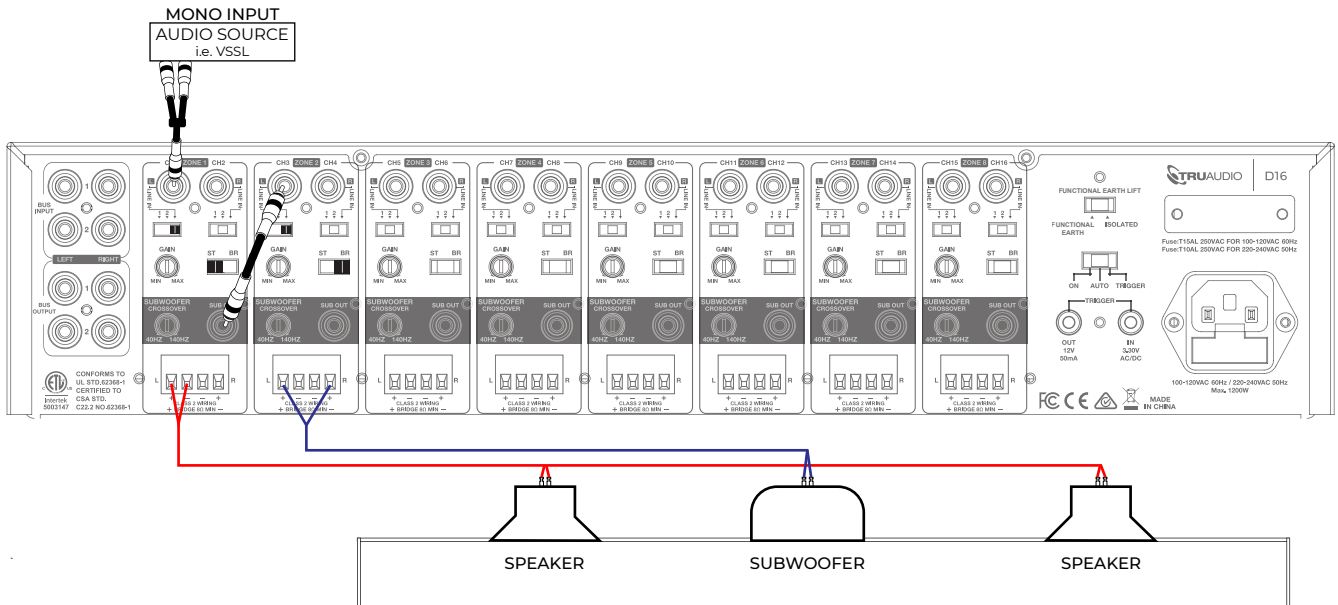

SETUP:

1. Attach your source using a single RCA “Y” cable to the “LINE IN” left channel on Zone 1.
2. Run a single RCA wire from the “SUB OUT” on Zone 1 to Zone 2 “LINE IN” left channel.
3. Set Zone 1 to “ST” (stereo), and Zone 2 to “BR” (bridge).
4. Attach both of the previously installed speakers to the same wire coming from the left channel.
5. Attach the newly installed IC-SUB-8 to the other speaker wire and now attach that wire to Zone 2 to the bridged outputs.
6. Now play music and adjust the crossover on Zone 1 and the gain knobs on both zones until you get the music set to your liking. Use your source volume to increase and decrease the overall sound.

NOTE: The speakers must be 8Ω each.